

Panasonic Manufacturing (Xiamen) Co., Ltd.

<https://www.panasonic.com>

©Panasonic Manufacturing (Xiamen) Co., Ltd. 2023



Printed in China

JZ50H168
MX0123W0

SD

Panasonic®

Operating Instructions

使用說明書

 
Juicer (Household Use)

榨汁機 (家庭用)

English

中文(繁體)

Model No. MJ-CS100

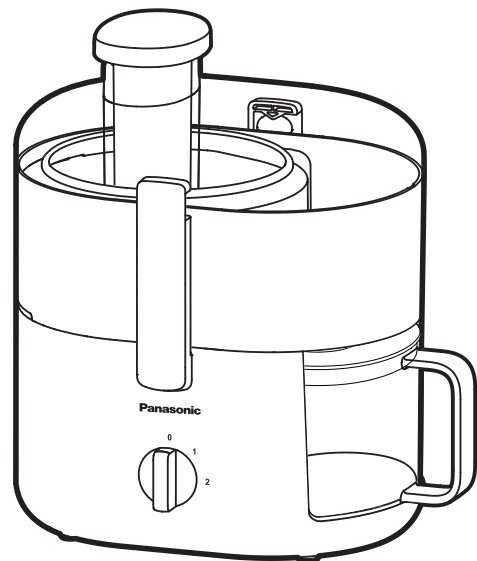

Thank you for purchasing this Panasonic product.

- Please read these instructions carefully to use the product correctly and safely.
- Before using this product **please give your special attention to “Safety Precautions” and “Important Information” (P. EN2 - EN4).**
- Please keep this Operating Instructions for future use.
- Panasonic will not accept any liability if the appliance is subject to improper use, failure to comply with these instructions.

Contents


Safety Precautions	EN2
Important Information	EN4
Parts Names and Instructions.....	EN5
Safety Lock	EN5
Overload and Overheating Protection	EN6
Before Use.....	EN6
How to Use.....	EN7
After Use.....	EN8
Troubleshooting	EN9
Specifications	EN9


Safety Precautions

Please make sure to follow these instructions.



In order to prevent accidents or injuries to the user, other people, and damage to property, please follow the instructions below.

■ The following signals indicate the degree of harm and damage when the product is misused.

 **WARNING:** Indicates potential hazard that could result in serious injury or death.


 **CAUTION:** Indicates potential hazard that could result in minor injury or property damage.

■ The symbols are classified and explained as follows.


 This symbol indicates prohibition.  This symbol indicates requirement that must be followed.


WARNING

To prevent electric shock, fire caused by short circuit, smoke, scald or injury.

-  ● **Do not allow infants and children to play with packaging material.**
(It may cause suffocation.)
- **Do not disassemble, repair or modify this appliance.**
→ Contact Panasonic Service Centre for inspection or repair.
- **Do not damage the power cord or power plug.**
Following actions are strictly prohibited:
Modifying, touching on or placing near heating elements or hot surfaces, bending, twisting, pulling, hanging/pulling over sharp edges, putting heavy objects on top, bundling the power cord or carrying the appliance by the power cord.
- **Do not plug or unplug the power plug with wet hands.**

WARNING

-  ● **Do not use the appliance if the power cord or power plug is damaged or the power plug is loosely connected to the outlet.**
 - If the power cord is damaged, it must be replaced by the manufacturer, its service centre or similarly qualified person in order to avoid a hazard.
 - Insert the power plug firmly.
- **Do not immerse the motor housing, power cord or power plug in water, or splash it with water and / or any liquid.**
- **Do not use the appliance if the spinner (rotating sieve) or the container cover (protection cover) is damaged or has visible cracks.**

-  ● **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

Children should be supervised to ensure that they do not play with the appliance.
- **Keep the appliance and its power cord out of reach of children.**
- **Dust off the power plug regularly.**
 - Unplug the power plug, and wipe with a dry cloth.
- **Discontinue using the appliance immediately and unplug in the unlikely event that this appliance stops working properly.**


e.g. for abnormal occurrences or breaking down

 - The power plug or the power cord become abnormally hot.
 - The appliance power fails.
 - The motor housing is deformed, has visible damage or is abnormally hot.
 - There is crack on the container and other parts.
 - There is an unpleasant smell.
 - There is abnormal turning noise while in use.
 - There is another abnormality or failure.
 - Contact Panasonic Service Centre for inspection or repair.
- **Make sure the voltage indicated on the label of the appliance is the same as your local supply.**

Also avoid plugging other devices into the same outlet to prevent electric overheating. However, if you are connecting a number of power plugs, make sure the total wattage does not exceed the rated wattage of the outlet.

CAUTION



To prevent electric leakage, electric shock, fire caused by short circuit, scald, injury or property damage.

-  ● **Do not use the appliance on the following places.**
 - On uneven surfaces, on carpets or tablecloths etc.
 - Place where it may be splashed with water or near a heat source.
 - Near any open water such as bathtubs, sinks, or other containers.
 - Near a wall or furniture.
 - Place the appliance on a firm, dry, clean flat worktop.
- **Never use hot water (over 60 °C) for cleaning purpose or fire to dry the appliance.**
- **Do not open the lid and put your fingers or utensils such as spoon or fork into the feeding tube while the appliance is operating. (Use the food pusher or another piece of fruit or vegetable to push it down.)**

Safety Precautions

Please make sure to follow these instructions.

CAUTION

 
 
 
-  ● Do not assemble the spinner when there is food residue left around the container.
 - Do not replace any parts of the appliance with non-genuine spare parts.
 - Do not carry the appliance by holding the power cord, feeding tube or container. When carrying the appliance, be sure to hold the motor housing with both hands.
 - Do not insert any object in the gaps of the appliance.
 - Do not use prohibited ingredients as stated in this instructions. (P. EN6)
-
-  ● Unplug the plug when the appliance is not in use.
 - Make sure to hold the power plug when unplugging it. Never pull on the power cord.
 - Beware not to trip over or get caught in the power cord while in use.
 - In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
 - Care shall be taken when handling the spinner and during cleaning. Do not clean the spinner by bare hand.
 - Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling, moving or cleaning.
 - Switch off the appliance and disconnect from supply before changing attachments or approaching parts that move in use.
 - Ensure to operate and rest the appliance as stated on specification table. (P. EN9 “Specifications”)
 - Ensure to clean the appliance especially surfaces in contact with food after use. (P. EN8 “After Use”)
 - This product is intended for household use only.

Important Information

- Do not use the appliance outdoors.
- Do not use the appliance for commercial purpose.
- Do not place the juicer jug on any heat sources or in a microwave.
- Do not drop the appliance or attachments to avoid damaging it.
- Do not wrap the power cord around the motor housing.
- Make sure the parts or attachments are set firmly before use.
- Do not operate the appliance without ingredients.



Parts Names and Instructions

Juicer

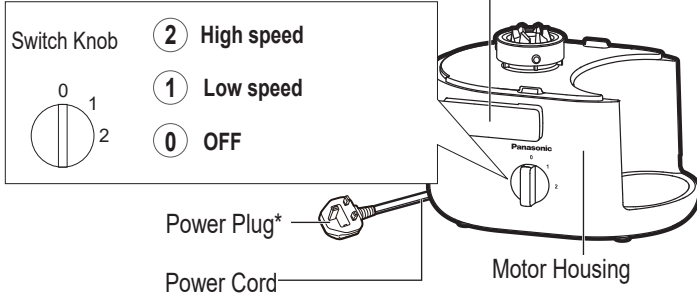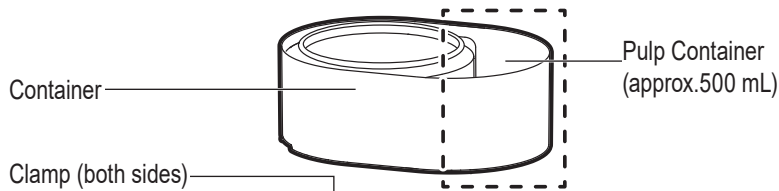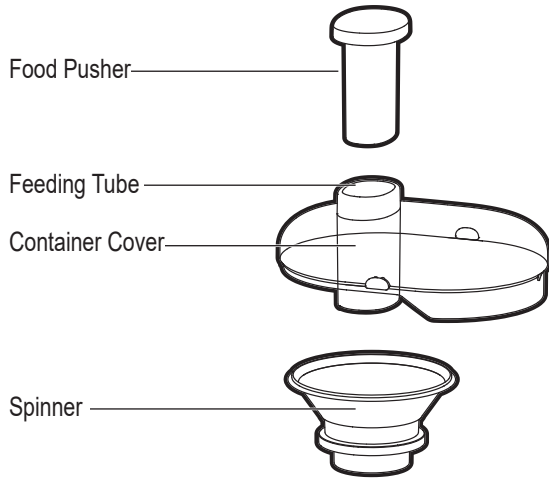

* The shape of the plug may vary from illustration.

  Accessory

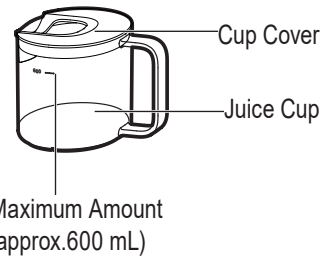

English

Safety Lock



The safety lock has been designed to prevent the juicer from switching on when the container unit is not properly in place.
This Juicer can operate only when the clamps are completely engaged.

Overload and Overheating Protection

In case of overload and overheating, the protection device is triggered to stop operation and it is not abnormal. After rotation stops, follow the below steps:

- Do not use the appliance repeatedly without any countermeasure.

1 Turn the switch knob to “0” position, unplug the appliance.

2 Remove attachment from motor housing. Remove accumulated food residue from the spinner/container cover.

- Remove the prohibited ingredient if used.

3 Reset the attachment, then start again. (P. EN7)

If the appliance still does not operate after performing the above, overheating protection has been activated.

Turn the switch knob to “0” position, unplug and rest the appliance for about 15 minutes or more (until motor housing returns to a normal temperature) to release overheating protection before using again.

(If appliance still does not operate, contact Panasonic Service Centre for inspection or repair.)

Before Use

Clean all detachable parts before using the appliance for the first time or when you have not used it for a while, and then assemble them securely. (P. EN7 “How to Use” and P. EN8 “After Use”)

 
Handling Precautions

- Ingredients that are not recommended:
 - Soft fruits that produce puree and can clog the spinner – e.g. bananas, peaches, apricots etc.
 - Low juice ingredients which can block the product – e.g. fresh basil leaf etc.
 - Hard ingredients which can cause product malfunction - e.g. sugarcane, coconut etc.
- Please remove hard seeds and stones from fruit before juicing such as guava etc. Hard seeds that are difficult to be removed such as pomegranate is prohibited for juicing.
- During initial usage, the appliances might have some unpleasant smell (slight burn smell) but this condition is normal.
- Some ingredients may produce a lot of pulps accumulate to the container cover that cause operation stop.(Overload and Overheating Protection: refer to page EN6)
- Make sure all parts are correctly mounted before you switch on the appliance.
- Some ingredients may accumulate at the container cover and spinner. If so, please power off the juicer and clear the accumulated ingredient before continuing for juicing to prevent leakage.


To disassemble




1 Release the clamp (both sides) while pushing the container cover.

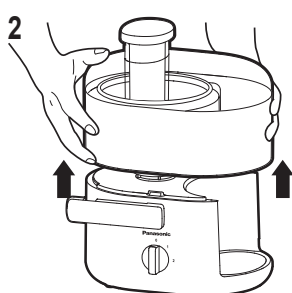

2 Lift up the container.

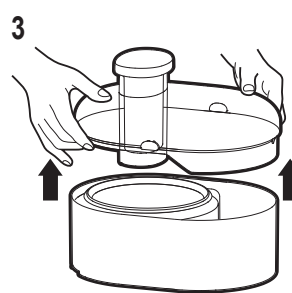 

 3 Gently lift up the food pusher and the container cover.

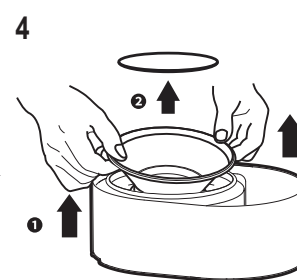


4 ① Lift up the spinner.
② Remove the spinner pad.

How to Use


1 Place the container onto the motor housing.

 - Make sure the container sits properly on the motor housing.

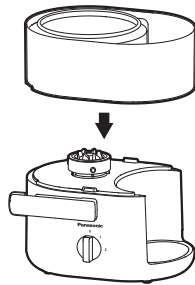


2

 - ① Place the spinner in the container and fix it into position.
- ② Place the container cover onto the container.

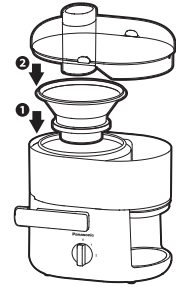


3 Swing the clamps (both sides) by using both hands to secure the container cover until a “click” sound is heard.

 - If the clamps are not engaged correctly, the motor will not operate.

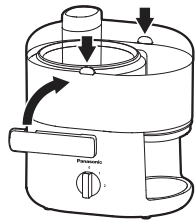


4 Attach the juice cup to the motor housing.

 - Set the juice cup properly, otherwise juice may flow-out from the juice cup.

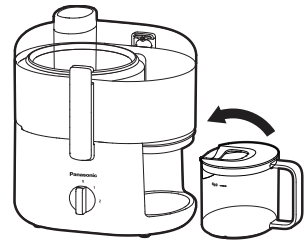


 5 Insert the power plug into the outlet completely. Rotate the switch knob to the proper speed position.

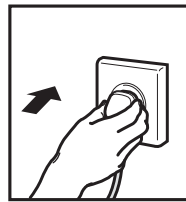


6 Place the ingredients one by one into the feeding tube, then press the feeding pusher slowly.

 - Place the juice cup properly, otherwise, the juice may leak out of it. When pulp container/juice cup is filled with pulp/juice, pour them out. Rotate the switch knob to position “0” before disassembling the container and juice cup.
- Depending on the ingredients type and amount, pieces of ingredients, seeds, and juice may spray out of the feeding tube.

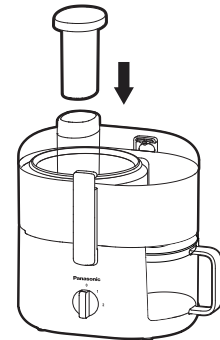

 7 After use, turn the switch knob to “0” position and unplug.


 


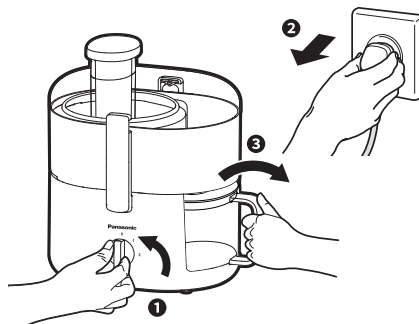


- Remove the juice cup .
- Before release the clamps(both sides), make sure the spinner stops rotation completely.
- Depending on different ingredient type and amount, some ingredients residue may remain in the container cover.



After Use

- Before detaching parts, make sure the motor has stopped completely, then disconnect the plug from the outlet.
- Clean the parts thoroughly after every use. Keep all parts clean and dry always.
- Do not use benzine, thinner, bleach, alcohol, nylon face of sponge, metal brushes or polish powder etc.
- Some discoloration of the plastic parts may occur upon usage. Even if the parts are washed with a sponge, the discoloration can not be completely removed, but it does not affect usage. If you clean the parts as soon as possible after usage, it can be removed relatively well.
- When cleaning the parts in a dishwasher, do not put heavy objects on top of the parts.

 
Cleaning

							
	Food Pusher	Container Cover	Cup Cover	Juice Cup	Container	Spinner	Motor Housing
Running Water	✓	✓	✓	✓	✓	✓	✗
Dishwasher	✓	✓	✓	✓	✓	✗	✗
Well-wrung Damp Cloth	✓	✓	✓	✓	✓	✗	✓
Brush	✗	✗	✗	✗	✗	✓	✗
Scouring Pad	✗	✗	✗	✗	✗	✗	✗
Soft Sponge	✓	✓	✓	✓	✓	✗	✓
Note	Wash each part in cold or lukewarm water with a soft sponge. Rinse and dry thoroughly before storing.				<ul style="list-style-type: none"> • Wash each part in cold or lukewarm water with a soft sponge. Rinse and dry thoroughly before storing. • When using a dishwasher, do not set the pulp container side of the part down in the dishwasher. (It may cause deformation of the part.) 	Wash carefully with a brush under running water.	Wipe off any dirt or stains with a clean damp cloth.


Storing

Power Plug and Power Cord

 - 1) Turn over the motor housing and wind the power cord two turns as illustrated.
- 2) Insert the power cord into the power cord clamp to fit the cord in position.

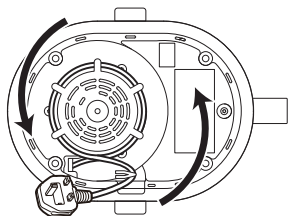

EN8

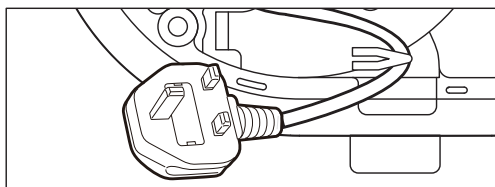 

Troubleshooting

Before calling for service, please check through this section.

Problem	Cause and Action
The appliance does not turn on.	<ul style="list-style-type: none"> ● The container/spinner/container cover/clamp(both sides) is not set properly. → Assemble it tightly. (P. EN7) ● The protection device of overload or overheating is activated. → Refer to "Overload and Overheating Protection" for inspection. (P. EN6) ● The power plug is disconnected. → Insert the power plug into outlet firmly.
Rotation stops abruptly.	<ul style="list-style-type: none"> ● The protection device of overload or overheating is activated. → Refer to "Overload and Overheating Protection" for inspection. (P. EN6)
There is abnormal noise or vibration increases.	<ul style="list-style-type: none"> ● Too much ingredients. → Reduce ingredient amount. ● The container/spinner/container cover is not assembled tightly. → Assemble it tightly. (P. EN7)

English

Specifications

Power supply	220 - 240 V ~ 50 - 60 Hz
Power consumption	230 - 260 W
Rated Time	Continuous (Repetition 2 min ON then, 2 min OFF)
Dimension (Approx.) (W x D x H)	272 x 201 x 283 (mm)
Mass (Approx.)	2.5 kg
Capacity (Approx.)	Pulp Container:500 mL ; Juice Cup:600 mL

非常感謝您購買此Panasonic的產品。

- 請仔細閱讀本使用說明書，以確保正確安全使用本產品。
- 使用前請務必仔細閱讀「安全注意事項」和「重要信息」（第 TC2-TC4頁）。
- 保用證請與本使用說明書一起妥善保管。
- 因對本產品的使用不當或未能遵循相關說明，Panasonic 將不承擔任何責任。

目錄

安全注意事項.....	TC2
重要信息.....	TC4
部件名稱及說明.....	TC5
安全鎖定.....	TC5
過負載和過熱保護.....	TC6
使用前.....	TC6
使用方法.....	TC7
使用後.....	TC8
故障診斷.....	TC9
規格.....	TC9

安全注意事項

請務必遵守以下說明。

為了減少人身傷害、觸電及火災的風險，請務必遵守下面說明的事項。

■ 以下標誌表示因錯誤使用本產品而造成傷害和損失的程度。



警告：

表示有可能導致重傷或死亡的潛在危險。



注意：

表示有可能導致人身傷害或財產損失的潛在危險。

■ 符號分類和說明如下。



表示禁止事項。



表示必須遵循的事項。



警告

為了避免出現觸電、因短路引起的火災、出煙、燙傷或受傷的危險。



● 切勿讓嬰兒或兒童玩耍包裝材料。

(可能會導致窒息)

● 絕對不可自行拆開、修理或改裝本產品。

→ 請與服務中心聯系進行檢查或維修。



● 請勿損壞電源線或電源插頭。

嚴格禁止以下行為：

加工、觸碰到高溫表面或將其放置在發熱品附近，強行彎曲、扭轉、拉扯、懸掛在鋒利的邊沿，或從鋒利邊沿拉過，在電源線上放置重物，捆紮電源線以及以拉住電源線的方式提起本產品。


● 請勿用潮濕的手插拔電源插頭。

警告

-  電源線或電源插頭損壞或插座鬆動時，切勿使用本產品。
 - 如果電源線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
 - 電源插頭須完全插入插座內。
- 請勿將本體及其電源線和電源插頭浸泡在水中，或被水及其他液體濺到。
- 若旋轉籃(旋轉篩)或容器蓋(保護蓋)損壞或有明顯裂紋，請勿使用本產品。
-  本產品不打算由兒童或有體力、感官或精神缺陷的人或缺乏經驗知識的人使用，除非有負責他們安全的人對他們進行產品使用有關的監督和指導。應照看好兒童，確保他們不玩耍本產品。
- 請務必確保兒童遠離本產品及其電源線。
- 請定期清除電源插頭上的灰塵。
 - 拔下電源插頭，並用乾布進行擦拭。
- 若本產品發生運轉異常時，請立即停止使用本產品，並拔出電源插頭。
 - 異常或故障示例：
 - 電源插頭和電源線異常發熱。
 - 無法通電。
 - 馬達機座變形、有明顯損壞或異常發熱。
 - 容器或其他部件有裂紋。
 - 飄出異味。
 - 使用過程中有異常的轉動聲。
 - 出現其它異常或故障。
 - 請與服務中心聯系進行檢查或維修。
- 請務必確保本產品的標籤上指示的電壓與當地電源電壓一致。還應避免在同一電源插座中插入其它設備，以免電路過熱。但如果連接多個電源插頭，應確保總功率不超過電源插座的額定功率。

注意



為了避免出現漏電、觸電、因短路造成的火災、燙傷、受傷或財產損失的危險。


-  請勿在下列場所使用本產品。
 - 在不平坦的表面、地毯或鋪有桌布上等場所。
 - 可能會被濺到水的地方或熱源附近。
 - 靠近水槽等或任何開放式水源附近。
 - 靠近牆壁或家具。
- 請將本產品放置在平穩、乾燥、乾淨、平坦的桌面上。
- 請勿使用熱水(超過 60 °C)進行清洗或使用火烘乾本產品。
- 本產品正在運轉時，請勿打開蓋子或將手指或湯匙、叉子等器具放入投料口中。(請使用壓料棒或用另一個水果或蔬菜把它推入。)
- 當容器周圍有食物殘渣時，請勿安裝旋轉籃。

安全注意事項

請務必遵守以下說明。

注意

-  ● 請勿使用非原裝部件更換本產品上的任何部件。
-  ● 請勿以握住電源線、投料口或容器蓋的方式拿取本產品。搬動本產品時，確保用雙手握緊馬達機座。
- 請勿在本產品的縫隙裏塞入任何物品。
- 請勿使用本說明書內所記載的禁止食材。(第 TC6 頁)

-  ● 不使用本產品時請拔出電源插頭。
- 務必以握拿電源插頭的方式拔出電源插頭。禁止用力拉扯電源線。
- 使用時，請小心不要踩踏電源線或被其絆倒。
- 為避免因溫度斷路器的誤復歸而發生危險，本產品不得經由外部開關裝置供電。(例：計時器，或連接到定期切換「開」、「關」功能的電路。)
- 在處理旋轉籃時，請一定小心。請勿徒手清理旋轉籃。
- 如無人看管、或在組裝，拆開，移動、清潔前，請先斷開產品電源。
- 更換配件或接觸任何在使用中會移動的零件前，請先關閉本產品並斷開電源。
- 請務必按照規格表的要求操作和關閉本產品。(第 TC9 頁「規格」)
- 請確保每次使用後清潔本產品，尤其是與食物接觸的表面。(第 TC8 頁「使用後」)
- 本產品僅供家庭使用。

 
 
重要信息

- 請勿在室外使用本產品。
- 請勿將本產品用於商業用途。
- 請勿將果汁杯放置於任何熱源上或放入微波爐中。
- 請勿使本產品或配件跌落，以免造成損壞。
- 請勿將電源線纏繞在本體上。
- 使用前請確保各部件及配件組裝好。
- 請勿讓本產品空轉。

部件名稱及說明

榨汁機

配件

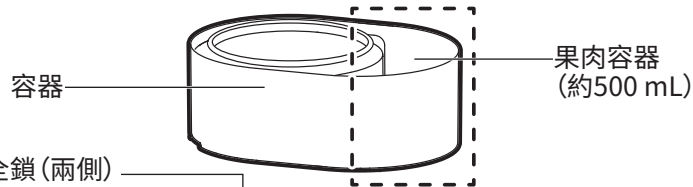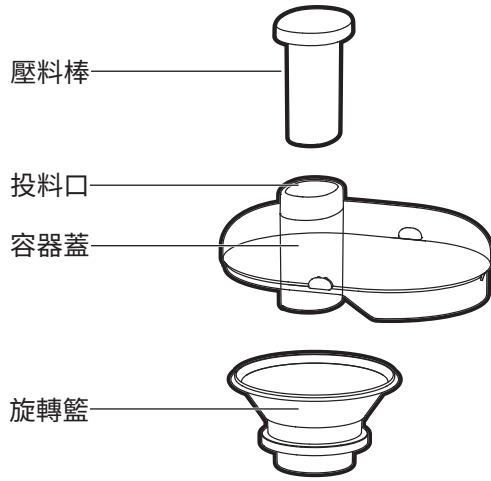

開關旋鈕



 
② 高速

① 低速

① 0 關閉


電源插頭*

電源線

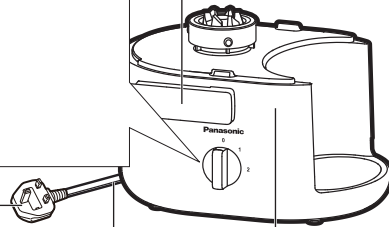

馬達機座

 * 電源插頭的形狀可能和圖示不同。

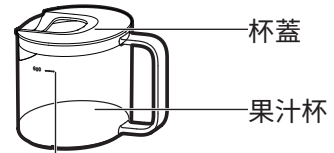

最大量
(約600 mL)

安全鎖定



安全鎖設計用於防止榨汁機在容器未正確組裝到位時啟動。榨汁機僅能在安全鎖完全鎖定時才能運轉。

過負載和過熱保護

當過負載或過熱時，保護裝置將被啟動以停止本產品運轉，這並非故障。運轉停止後，請按照以下步驟進行操作。

- 請勿在未加處理的情況下反復使用本產品。

1 將開關旋鈕旋轉到「0」檔，拔除電源插頭。

2 將配件從本體上取下。清除掉旋轉籃及容器蓋上堆積的食物殘渣。

- 如果放入了被禁止的食材，請取出。

3 重新組裝配件，然後再次開始。(第TC7頁)

如果按照上述操作後本產品仍無法正常使用，則是過熱保護被啟動。

再次使用前，將開關旋鈕旋轉到「0」檔，拔除電源插頭並讓本產品休息約15分鐘或以上（直至本體恢復至正常溫度）以解除過熱保護。

(若本產品還無法正常使用，請與服務中心聯系進行檢查或維修。)

使用前

首次使用前或一段時間未使用時，請清潔所有可拆卸部件，然後將其牢固安裝。(第TC7頁「使用方法」和第TC8頁「使用後」)

 
注意事項

- 禁止食材：
 - 會產生果泥的軟水果會堵塞旋轉籃，如香蕉、桃、杏等。
 - 黏性強的食品，如新鮮羅勒葉等。
 - 可能會導致產品出現故障的堅硬食材，例如甘蔗、椰子等。
- 榨果汁前，請把水果裏的堅硬種子和核清除，例如番石榴等水果。
- 具有難以去除堅硬種子的水果，如石榴將禁止榨汁。
- 在最初使用本產品時，可能會產生一些氣味(輕微燃燒的味道)在這種情況之下是正常的。
- 有些食材的成分可能會產生大量的果漿渣累積在容器蓋上，這樣會導致操作停止。(第TC6頁「過負載和過熱保護」)
- 操作本產品前，請確保所有配件都已經正確安裝。
- 某些食材可能會堆積在容器蓋及旋轉籃。
 - 如果是這樣，繼續榨汁之前先關掉榨汁機然後清除堆積的食材以防止泄漏。


拆解方法




1 推動容器蓋的同時鬆開安全鎖(兩側)。

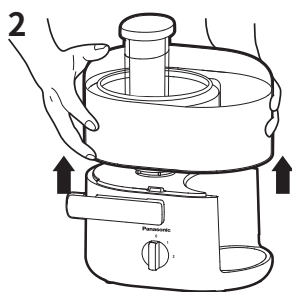

2 取出容器。

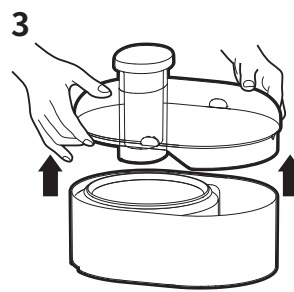 

3 輕輕提起壓料棒和容器蓋。

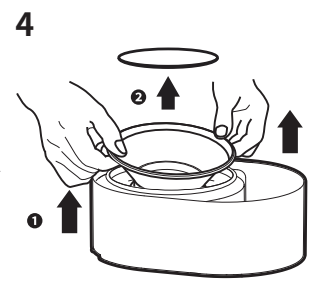 


4 ① 取出旋轉籃。
② 取出旋轉籃紙墊。

使用方法


1 將容器安裝在馬達機座上。

 - 確保容器完全安裝到馬達機座上。

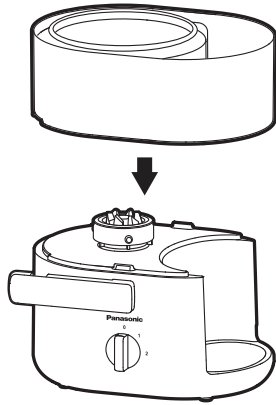


2

 - ① 將旋轉籃安裝到容器上，並安裝到位。
- ② 將容器上蓋放在容器上面。

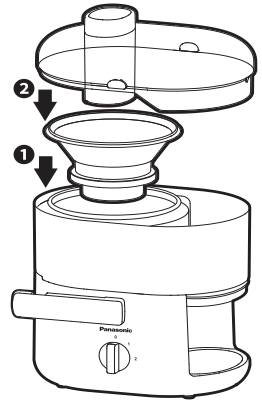


3 用雙手推動安全鎖直至聽見一聲「喀嚓」聲響以將容器蓋鎖好。

 - 如果安全鎖沒有完全鎖上，馬達無法運轉。

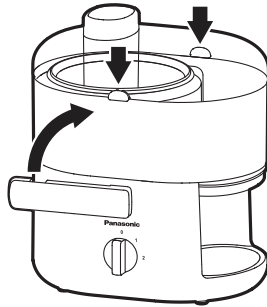


4 將果汁杯安裝到馬達機座內。

 - 把果汁杯放好，否則果汁將流出杯外。

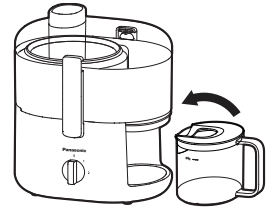


5 將電源插頭完全插入電源插座內。將開關旋鈕旋轉到合適的檔位。

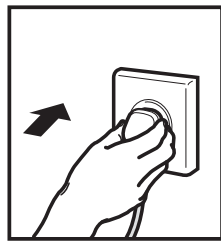 


6 將食材一個接一個放入投料口，並用壓料棒慢慢推入。

 - 把果汁杯放好，否則果汁將流出杯外。當果肉容器/果汁杯裝滿果肉/果汁時，請將它們倒出。拆卸容器和果汁杯前請先將開關旋鈕旋轉到「0」檔。
- 依據食材種類和分量的不同，食材碎片、種子及果汁可能會從投料口飛濺出來。

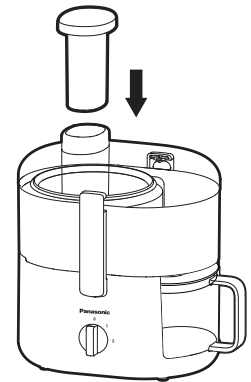

7 使用後，將開關旋鈕旋轉到「0」檔，並拔下電源插頭。

 - 將果汁杯移出。
- 鬆開安全鎖（兩側）之前，請確保旋轉籃完全停止轉動。
- 根據不同的食材與數量，有些殘渣可能駐留在容器罩蓋內。

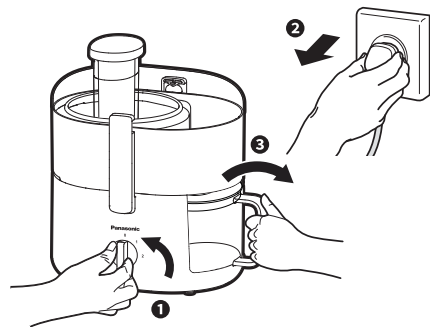

使用後

- 拆解配件前,確保本產品完全停止,然後從電源插座上拔下電源插頭。
- 每次使用後,請徹底清潔部件。並保持所有的部件乾淨且乾燥。
- 請勿使用揮發性溶劑、稀釋劑、漂白劑、酒精、尼龍面海綿、金屬刷或拋光粉等。
- 使用時塑料部件可能會變色。即使用海綿清洗也無法完全去除變色現象,但這對使用上並不造成任何問題。產品使用後請盡快進行清潔,較能去除色素。
- 使用洗碗機進行部件清洗時,請勿將重物放置在各部件的上方。



清潔

	 壓料棒	 容器蓋	 杯蓋	 果汁杯	 果肉容器	 旋轉籃	 馬達機座
流水	✓	✓	✓	✓	✓	✓	✗
洗碗機	✓	✓	✓	✓	✓	✗	✗
擰乾的濕布	✓	✓	✓	✓	✓	✗	✓
刷子	✗	✗	✗	✗	✗	✓	✗
百潔布	✗	✗	✗	✗	✗	✗	✗
海綿	✓	✓	✓	✓	✓	✗	✓
提示	使用柔軟的海綿在冷水或溫水中清洗每一個部件,收納前請沖洗乾淨並完全晾乾。				<ul style="list-style-type: none"> • 使用柔軟的海綿在冷水或溫水中清洗每一個部件,收納前請沖洗乾淨並完全晾乾。 • 使用洗碗機時,請勿將果肉容器的側面朝下放置在洗碗機內。(可能導致部件變形) 	使用刷子在流水下仔細清洗。	使用柔軟的擰乾的濕布擦拭掉任何污垢和污漬。

電源線收納

電源插頭和電源線

  - 1) 將馬達機座外殼翻轉過來,如圖所示將電源線纏繞 2) 將電源線插入電源線夾以將電源線固定到位。兩圈。

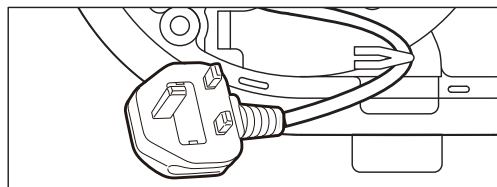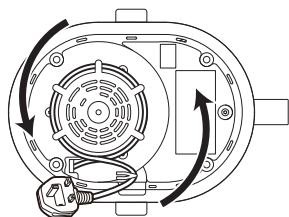

故障診斷

撥打客服電話或安排維修之前，請先檢查下列事項。

問題	原因和解決方法
無法啟動本產品	<ul style="list-style-type: none">● 容器/旋轉籃/容器蓋/安全鎖(兩側)組裝不牢固。 → 組裝到位。(第TC7頁)● 過負載或過熱保護被啟動。 → 請參照「過負載和過熱保護」進行檢查。(第TC6頁)● 電源插頭脫落。 → 將電源插頭完全插入電源插座內。
突然停止運轉	<ul style="list-style-type: none">● 過負載或過熱保護被啟動。 → 請參照「過負載和過熱保護」進行檢查。(第TC6頁)
有異常聲音或震動較大	<ul style="list-style-type: none">● 食材放入太多。 → 減少食材份量。● 容器/旋轉籃/容器蓋組裝不牢固。 → 組裝到位。(第TC7頁)

中文(繁體)

規格

電源	220-240 V ~ 50-60 Hz
額定功率	230-260W
額定時間	持續運轉 (以運轉2分鐘休息2分鐘方式重復操作)
尺寸(長x寬x高) (約)	272 x 201 x 283 mm
重量(約)	2.5 kg
容量(約)	果肉容器:500 mL;果汁杯:600 mL

Memo

Memo